

User's Guide for bq25570 Battery Charger Evaluation Module for Energy Harvesting

This user's guide describes the bq25570 evaluation module (EVM), how to perform a stand-alone evaluation and how to allow the EVM to interface with the system and host. The boost converter output has been configured to deliver up to 4.2-V maximum voltage to its output, VSTOR, using external resistors. This voltage will be applied to the storage element as long as the storage element voltage at VBAT is above the internally programmed undervoltage of 2.0 V. The integrated buck converter provides up to 1.8 V and 100 mA at VOUT. The VBAT_OK indicator toggles high when VSTOR ramps up to 3.0 V and toggles low when VSTOR ramps down to 2.8 V.

Contents

1	Introduction	2
1.1	EVM Features	2
1.2	General Description	2
1.3	Design and Evaluation Considerations	3
1.4	EVM Schematic	4
1.5	EVM I/O Connections	5
2	EVM Performance Specification Summary	7
3	Test and Measurement Summary	7
3.1	Test Setup Tips	7
3.2	Test Setups and Results	8
3.3	Tips for other Tests and Measurements	16
4	Bill of Materials and Board Layout	17
4.1	Bill of Materials	17
4.2	EVM Board Layout	18
5	PCB Layout Guideline	20

List of Figures

1	EVM Schematic	4
2	Test Setup for Measuring Boost Charger Efficiency	9
3	Charger Efficiency versus Input Voltage	9
4	Charger Efficiency versus Input Current	10
5	Test Setup for Measuring Buck Converter Efficiency	11
6	Buck Converter Efficiency versus Output Current	11
7	Test Setup for Performing Load Transient on Buck Output	12
8	50-mA Load Transient on V _{OUT}	12
9	Charger Operational Waveforms During 50-mA Load Transient	13
10	Buck Operational Waveforms During 50-mA Load Transient	14
11	Test Setup for Charging a Super Capacitor from Buck Output	15
12	Charging a Super Cap from V _{OUT}	15
13	EVM PCB Top Assembly	18
14	EVM PCB Top Layer	18
15	EVM PCB Bottom Layer	19

List of Tables

1	I/O Connections and Configuration for Evaluation of bq25570 EVM.....	5
2	Bill of Materials.....	17

1 Introduction

1.1 EVM Features

- Evaluation module for bq25570
- Ultra-low power boost converter/charger and buck converter with battery management for energy harvester applications
- Resistor-programmable settings for under voltage, over voltage providing flexible battery management
- Programmable push-pull output indicator for battery status (VBAT_OK)
- Test points for key signals available for testing purpose – easy probe hook-up.
- Jumpers available – easy to change settings

1.2 General Description

The bq25570 is an integrated energy harvesting Nano-Power management solution that is well suited for meeting the special needs of ultra-low power applications. The product is specifically designed to efficiently acquire and manage the microwatts (μW) to milliwatts (mW) of power generated from a variety of high output impedance (HiZ) DC sources like photovoltaic (solar) or thermal electric generators; or with an AC/DC rectifier, a piezoelectric generator. The bq25570 implements a highly efficient, pulse-frequency modulated (PFM) boost converter/charger targeted toward products and systems, such as wireless sensor networks (WSN) which have stringent power and operational demands. Assuming a depleted storage element has been attached, the bq25570 DC-DC boost converter/charger that requires only microwatts of power to begin operating in cold start mode. Once the boost converter output, VSTOR, reaches $\sim 1.8\text{ V}$ and can now power the converter, the main boost converter can now more efficiently extract power from low voltage output harvesters such as thermoelectric generators (TEGs) or single and dual cell solar panels. For example, assuming the HiZ input source can provide at least $5\text{ }\mu\text{W}$ typical and the load on VSTOR (including the storage element leakage current) is less than $1\text{ }\mu\text{A}$ of leakage current, the boost converter can be started with VIN_DC as low as 330 mV typ., and once VSTOR reaches 1.8 V , can continue to harvest energy down to VIN_DC $\approx 120\text{ mV}$. The integrated PFM buck converter is also powered from VSTOR and, assuming enough input power is available, provides up to 100 mA from the VOUT pin. The VOUT voltage is externally programmed to slightly less than the VSTOR voltage.

HiZ DC sources have a maximum output power point (MPP) that varies with ambient conditions. For example, a solar panel's MPP varies with the amount of light on the panel and with temperature. The MPP is listed by the harvesting source manufacturer as a percentage of its open circuit (OC) voltage. Therefore, the bq25570 implements a programmable maximum power point tracking (MPPT) sampling network to optimize the transfer of power into the device. The bq25570 periodically samples the open circuit input voltage every 16 seconds by disabling the boost converter for 256 ms and stores the programmed MPP ratio of the OC voltage on the external reference capacitor (C2) at VREF_SAMP. Typically solar cells are at their MPP when loaded to $\sim 70\text{--}80\%$ of their OC voltage and TEGs at $\sim 50\%$. While the storage element is less than the user programmed maximum voltage (VBAT_OV), the boost converter loads the harvesting source until VIN_DC reaches the MPP (voltage at VREF_SAMP). This results in the boost converter regulating the input voltage of the converter until the output reaches VBAT_OV, thus transferring the maximum amount of power currently available per ambient conditions to the output.

The battery undervoltage, VBAT_UV, threshold is checked continuously to ensure that the internal battery FET, connecting VSTOR to VBAT, does not turn on until VSTOR is above the VBAT_UV threshold (2.0 V). The over voltage (VBAT_OV) setting initially is lower than the programmed value at startup (varies on conditions) and is updated after the first $\sim 32\text{ ms}$. Subsequent updates are every $\sim 64\text{ ms}$. The VBAT_OV threshold sets maximum voltage on VSTOR and the boost converter stops switching when the voltage on VSTOR reaches the VBAT_OV threshold. The open circuit input voltage (VIN_OC) is measured every ~ 16 seconds in order for the Maximum Power Point Tracking (MPPT) circuit to sample and hold the input regulation voltage. This periodic update continually optimizes maximum power delivery based on the harvesting conditions.

The bq25570 was designed with the flexibility to support a variety of energy storage elements. The availability of the sources from which harvesters extract their energy can often be sporadic or time-varying. Systems will typically need some type of energy storage element, such as a re-chargeable battery, super capacitor, or conventional capacitor. The storage element will make certain constant power is available when needed for the systems. In general, the storage element also allows the system to handle any peak currents that can not directly come from the input source. It is important to remember that batteries and super capacitors can have significant leakage currents that need to be included with determining the loading on VSTOR.

To prevent damage to a customer's storage element, both maximum and minimum voltages are monitored against the internally programmed under-voltage (VBAT_UV) and user programmed over-voltage (VBAT_OV) levels.

To further assist users in the strict management of their energy budgets, the bq25570 toggles a user programmable battery good flag (VBAT_OK), checked every 64 ms, to signal the microprocessor when the voltage on an energy storage element or capacitor has risen above (OK_HYST threshold) or dropped below (OK_PROG threshold) a pre-set critical level. To prevent the system from entering an undervoltage condition or if starting up into a depleted storage element, it is highly recommended to isolate the system load from VSTOR by 1) setting VBAT_OK equal to the buck converter's enable signal VOUT_EN and 2) using an NFET to invert the BAT_OK signal so that it drives the gate of PFET, which isolates the system load from VSTOR.

For details, see the bq25570 data sheet ([SLUSAH0](#)).

1.3 Design and Evaluation Considerations

This user's guide is not a replacement for the data sheet. Reading the data sheet first will help in understanding the operations and features of this IC. In this document, "battery" or "VBAT" will be used but one could substitute any appropriate storage element.

1.3.1 System Design Tips

Compared to designing systems powered from an AC/DC converter or large battery (for example, low impedance sources), designing systems powered by HiZ sources requires that the system load-per-unit time (for example, per day for solar panel) be compared to the expected loading per the same time unit. Often there is not enough real time input harvested power (for example, at night for a solar panel) to run the system in full operation. Therefore, the energy harvesting circuit collects more energy than being drawn by the system when ambient conditions allow and stores that energy in a storage element for later use to power the system. See [SLUC461](#) for an example spreadsheet on how to design a real solar-panel-powered system in three easy steps:

1. Referring the system rail power back to VSTOR
2. Referring the required VSTOR power back to bq255xx input power
3. Computing the minimum solar panel area from the input power requirement

As demonstrated in the spreadsheet, for any boost converter, you must perform a power balance, $P_{OUT} / P_{IN} = (V_{STOR} \times I_{STOR}) / (V_{IN} \times I_{IN}) = \eta$ where η is the estimated efficiency for the same or very similar configuration in order to determine the minimum input power needed to supply the desired output power.

This IC is a highly efficient charger for a storage element such as a battery or super capacitor. The main difference between a battery and a super capacitor is the capacity curve. The battery typically has little or no capacity below a certain voltage, where as the capacitor does have capacity at lower voltages. Both can have significant leakage currents that will appear as a DC load on VSTOR/VBAT.

1.4 EVM Schematic

Figure 1 is the schematic for this EVM.

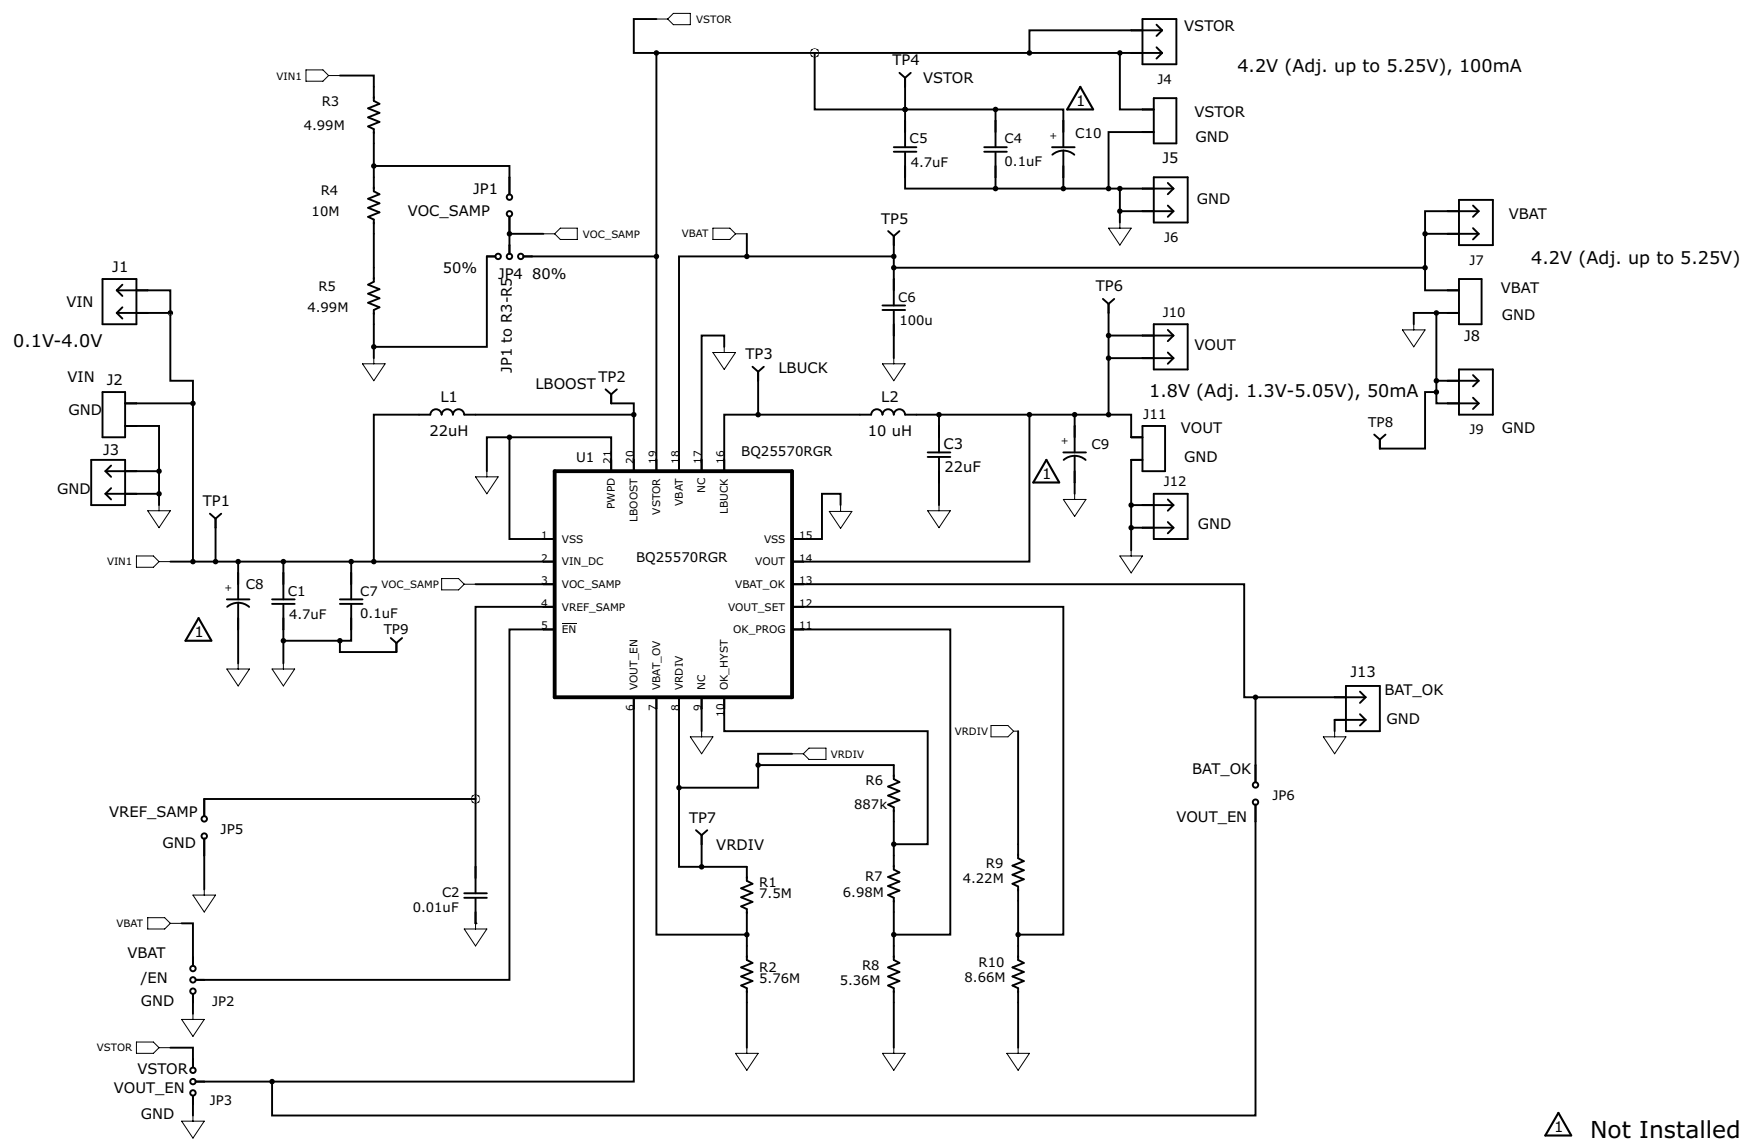


Figure 1. EVM Schematic

1.5 EVM I/O Connections

Table 1. I/O Connections and Configuration for Evaluation of bq25570 EVM

Headers and Terminals	Description	Comments/Recommended Setting
J1–VIN	Input source (+)	If VIN_DC is higher than VSTOR and VSTOR is equal to VBAT_OV, the input VIN_DC is pulled to ground through a small resistance to stop further charging of the attached battery or capacitor. It is critical that if this case is expected, the impedance of the source attached to VIN_DC be higher than 20 Ω and not a low impedance source.
J2 - VIN/GND	Input source terminal block	
J3–GND	Input source return (–)	
J4 - VSTOR	Boost charger output (+)	Buck converter input
J5 - VSTOR/GND	Boost charger output terminal block	
J6 - GND	Boost charger return (-)	
J7– VBAT	Storage element connection (+)	
J8 - VBAT/GND	Storage element terminal block	
J9–GND	Storage element connection return (–)	
J10 – VOUT	Buck converter output (+)	
J11 - VOUT/GND	Buck converter output terminal block	
J12 -GND	Buck converter output (-)	
J13 – BAT_OK	Battery Status Indicator (+/-)	
Test Points		
TP1	Input source (+)	
TP2	Boost charger switching node	
TP3	Buck converter switching node	
TP4	Boost charger output (+)	
TP5	Storage element connection (+)	
TP6	Buck converter output (+)	
TP7	VRDIV node	NOTE: Providing an additional low impedance current path in parallel with the feedback resistors , for example, with a 10 M Ω scope probe attached, will degrade regulation accuracy.
TP8	Output return (-)	
TP9	Input return (-)	
Jumpers		
JP1 – VOC_SAMP	VOC_SAMP = external resistors sized to configure the IC to regulate VIN to 75% of VOC_SAMP.	Uninstalled (NOTE: Do not install if JP4 shunt is installed)
JP2 - /EN	/EN = GND enables the IC. /EN=VSTOR disables the IC.	/EN=GND
JP3 - VOUT_EN	VOUT_EN = VSTOR enables the buck converter when VSTOR is up VOUT_EN = GND disables the buck converter	VOUT_EN=VSTOR (NOTE: Do not install if JP6 shunt is installed)

Table 1. I/O Connections and Configuration for Evaluation of bq25570 EVM (continued)

Headers and Terminals	Description	Comments/Recommended Setting
JP4 - VOC_SAMP	VOC_SAMP = 80% configures the IC to regulate VIN to 80% of OCV. VOC_SAMP = 50% configures the IC to regulate VIN to 50% of OCV.	JP4 = 80% (NOTE: Do not install if JP1 shunt is installed)
JP5 - VREF_SAMP to GND	VREF_SAMP = GND	Uninstalled (NOTE: Providing an additional leakage path for the VREF_SAMP capacitor for example, through a 10 MΩ scope probe attached to VREF_SAMP, will degrade input voltage regulation performance).
JP6 - VBAT_OK to /EN	BAT_OK=VOUT_EN configures the buck converter to be enabled only when VSTOR is greater than the VBAT_OK threshold per the resistors (2.786V on the EVM)	Uninstalled (NOTE: Do not install if JP3 shunt is installed)

2 EVM Performance Specification Summary

See Data Sheet “Recommended Operating Conditions” for component adjustments. For details about the resistor programmable settings, see bq25570 data sheet ([SLUSAH0](#)).

		MIN	NOM	MAX	UNIT
$V_{IN(DC)}$	DC input voltage into VIN_DC	0.13		4.0	V
$V_{IN\_Start-up(DC)}$	DC minimum start-up voltage into depleted storage element, no load attached to VSTOR or VOUT and $IBAT_{LEAK} \leq 1\mu A$		330		mV
V_{BAT_OV}	Battery Over Voltage Threshold –min and max values include +/- 2% set point accuracy and +/-1% resistor tolerance but excludes effects of output ripple	4.04	4.18	4.32	V
V_{OUT}	Buck Converter Output Voltage for $I_{VOUT} < 95\text{ mA}$ - min and max values include +/- 2% set point regulation accuracy and +/-1% resistor tolerance but excludes effects of output voltage ripple, line regulation and load regulation	1.75	1.8	1.85	V
V_{BAT_OK}	OK_HYST indication toggles high when VSTOR ramps up - min and max values include +/- 2% set point accuracy and +/-1% resistor tolerance	2.70	2.79	2.88	V
	OK_PROG indication toggles low when VSTOR ramps down - min and max values include +/- 2% set point accuracy and +/-1% resistor tolerance	2.89	2.99	3.09	V
MPPT	Maximum Power Point Tracking, Resistor Programmed % of Open Circuit Voltage		80%		
C_{BAT}	A 100 μF low leakage ceramic capacitor is installed on the EVM as the minimum recommended equivalent battery capacitance.	100			μF

See [SLUC484](#) spreadsheet tool to assist with modifying the MPPT, VBAT_OV, VBAT_OK and VOUT resistors for your application.

CAUTION


If changing the board resistors or the capacitor on VREF_SAMP (C2), it is important to remember that residual solder flux on a board has a resistivity in the 1-20 M Ω range. Therefore, flux remaining in parallel with changed 1-20 M Ω resistors can result in a lower effective resistances, which will produce different operating thresholds than expected. Similarly flux remaining in parallel with the VREF_SAMP capacitor provides an additional leakage path, which results in the input voltage regulation set point drooping during the 16-s MPPT cycle. Therefore, it is highly recommended that boards be thoroughly cleaned twice, once after removing the old components and again after installing the new components. If possible, the boards should be cleaned until the wash solution measures ionic contamination greater than 50 M Ω .

3 Test and Measurement Summary

3.1 Test Setup Tips

Energy harvesting power sources are high impedance sources. A source-meter configured as a current source with voltage compliance set to the harvester's open circuit voltage is the best way to simulate the harvester. When simulating a HiZ energy harvester with low output impedance lab power supply, it is necessary to simulate the harvester's impedance with a physical resistor between the supply, V_{PS} , and V_{IN} of the EVM. When the MPPT sampling circuit is active, $V_{IN} = V_{PS}$ = the harvester open circuit voltage (VOC) because there is no input current to create a drop across the simulated impedance (that is, open circuit); therefore, V_{PS} should be set to the intended harvester's open circuit voltage. When the boost converter is running, it draws only enough current until the voltage at VIN_DC droops to the MPPT's sampled voltage that is stored at VREF_SAMP.

The battery (storage element) can be replaced with a simulated battery. Often electronic 4 quadrant loads give erratic results with a “battery charger” due to the charger changing states (fast-charge to termination and refresh) while the electronic load is changing loads to maintain the “battery” voltage. The charging and loading get out of phase and create a large signal oscillation which is due to the 4 quadrant meter. A simple circuit can be used to simulate a battery and works well and can quickly be adjusted for voltage. It consists of load resistor (~10 Ω , 2 W) to pull the output down to some minimum storage voltage (sinking current part of battery) and a lab supply connected to the BAT pin via a diode. The lab supply biases up the battery voltage to the desired level. It may be necessary to add more capacitance across R1.

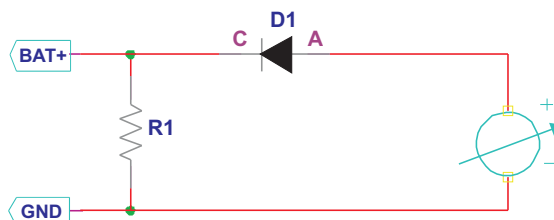

3.2 Test Setups and Results

3.2.1 Boost Charger Efficiency

The test setup is shown in [Figure 2](#). The specific equipment used for the test results in [Figure 3](#) and [Figure 4](#) is listed below:

1. VIN_DC was connected to a Keithley 2420 source-meter configured as a current source with voltage compliance (clamp) set to the open circuit voltage.
2. VSTOR was connected a Keithley 2420 source-meter configured as a voltage source set to the VSTOR voltage. The current sunk by the source-meter was the output current of the charger

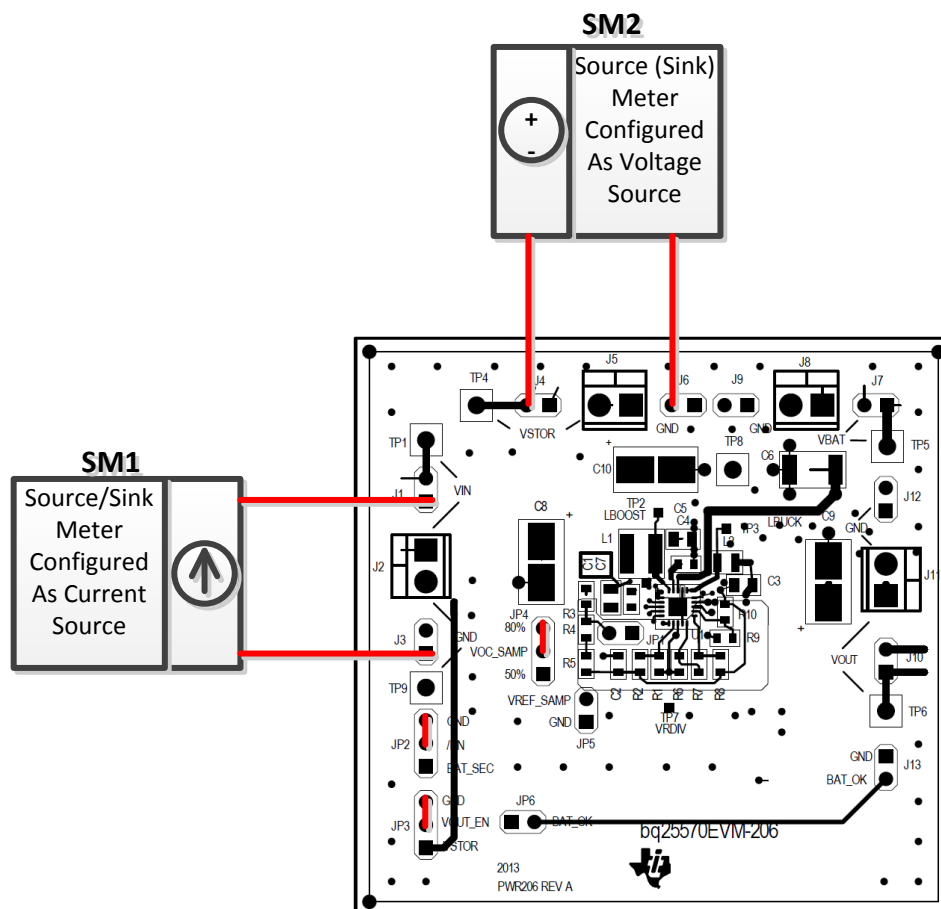


Figure 2. Test Setup for Measuring Boost Charger Efficiency

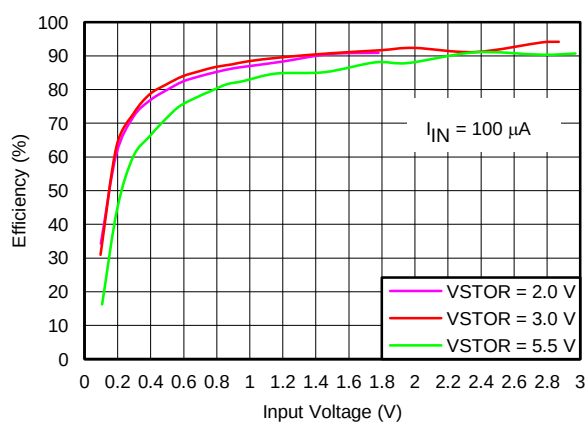


Figure 3. Charger Efficiency versus Input Voltage

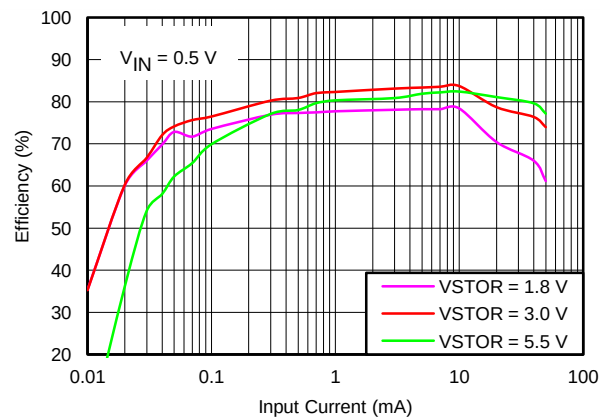


Figure 4. Charger Efficiency versus Input Current

Because the boost converter regulates input voltage instead of output voltage, uses PFM switching, operates at very low currents and has MPPT, efficiency cannot be measured using the same test setup as for an output regulating, higher power, fixed frequency PWM switching boost converter. The VSTOR output must be held at a fixed voltage (below VBAT_OV threshold) by an external source that is capable of sinking current, with that sunk current being the measured output current. In addition to filtering bursts of current due to PFM switching and the ripple voltage on VIN_DC due to input voltage regulation, the series input current meter and input voltage meter must be set to filtering, or averaging, or both, which will result in longer than usual measurement times, but not longer than the 16 s MPPT sample time. Measurements for both VIN and IN will be most accurate when taken at the midpoint of the 16 s MPPT period. Remote sensing by the source-meters is possible but, on the input side, the source-meter output regulation loop and the charger MPPT input regulation loop may interfere with each other and cause the input voltage to oscillate. Adding a large capacitor across VIN_DC and GND will eliminate this oscillation but the capacitor's leakage current will inflate the input current measurement and lower efficiency.

See [SLUA691](#) for a detailed explanation on how to take these and other measurements with source-meters.

3.2.2 Buck Converter Efficiency

The test setup is shown in [Figure 5](#). The specific equipment used for the test results in [Figure 6](#) is listed below:

1. VSTOR was connected to a low impedance power supply with a series current meter to measure current. The current meter must be able to measure currents in the nA range and may require manual range adjustments so that the range is always $\leq 10 \times$ the expected current for best accuracy. The voltage meter measures the input voltage as close to the IC VSTOR pin as possible.
2. VOUT was connected to a resistor box with a series current meter to measure the current. (NOTE: The current meter must be able to measure currents in the nA range and may require manual range adjustments so that the range is always $\leq 10 \times$ the expected current for best accuracy.) The voltage meter measured the VOUT voltage as close to the IC VOUT pin as possible

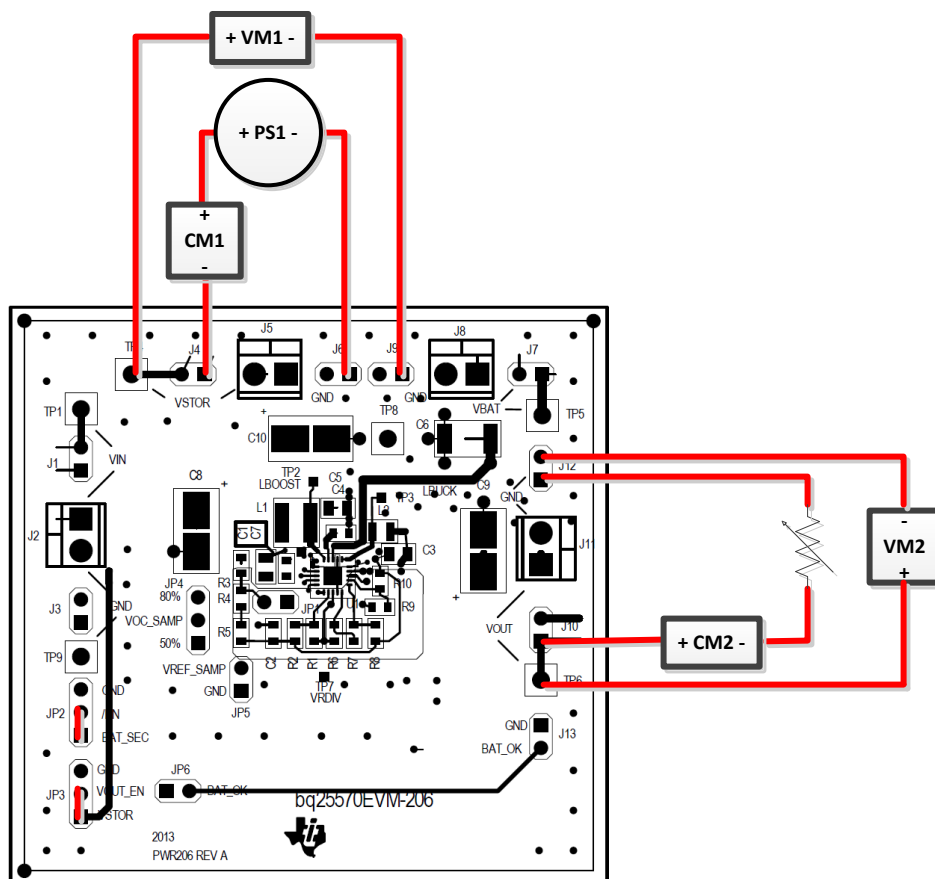


Figure 5. Test Setup for Measuring Buck Converter Efficiency

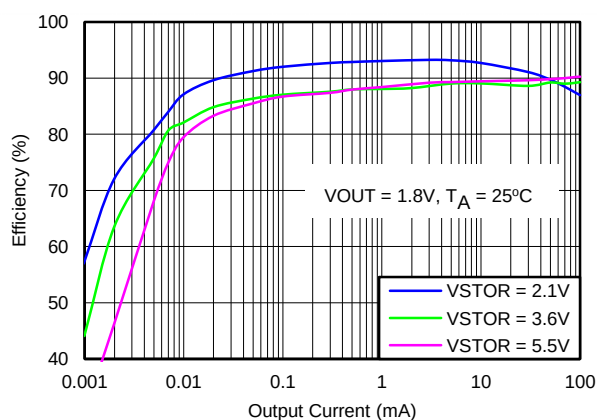


Figure 6. Buck Converter Efficiency versus Output Current

The buck converter is powered from VSTOR; therefore, to measure its efficiency alone, VIN_DC should be left floating, and the input power supply applied to VSTOR. To filter bursts of current due to PFM switching, the series input current meter from the VSTOR supply must be set to the highest level of filtering and/or averaging, which will result in longer than usual measurement times.

Alternatively, these measurements can be taken with source-meters instead of discrete power supply, resistor load box and meters. The source-meter on VSTOR is configured as a voltage source. The source-meter on OUT can be configured as either a current source that sinks current (i.e., negative current) or as a voltage source with voltage at least 100 mV below the lowest expected regulation voltage point.

3.2.3 Buck Converter Load Transient

The test setup is shown in Figure 7. The specific equipment used for the test results in Figure 8 is listed below:

1. VIN_DC was connected to a low impedance power supply by a series 100- Ω resistor. JP4 sets the MPPT voltage to 50% of VIN_OC.
2. VOUT was connected to a switch with a series resistor that switches in a 36 Ω resistor.
3. VBAT was connected a 3.2-V charged 4.2-V coin cell.
4. VSTOR, VOUT and VIN_DC was monitored by oscilloscope voltage scope probes attached to TP4, TP6, and TP1 respectively, and GND. IOUT was measured with a current probe.

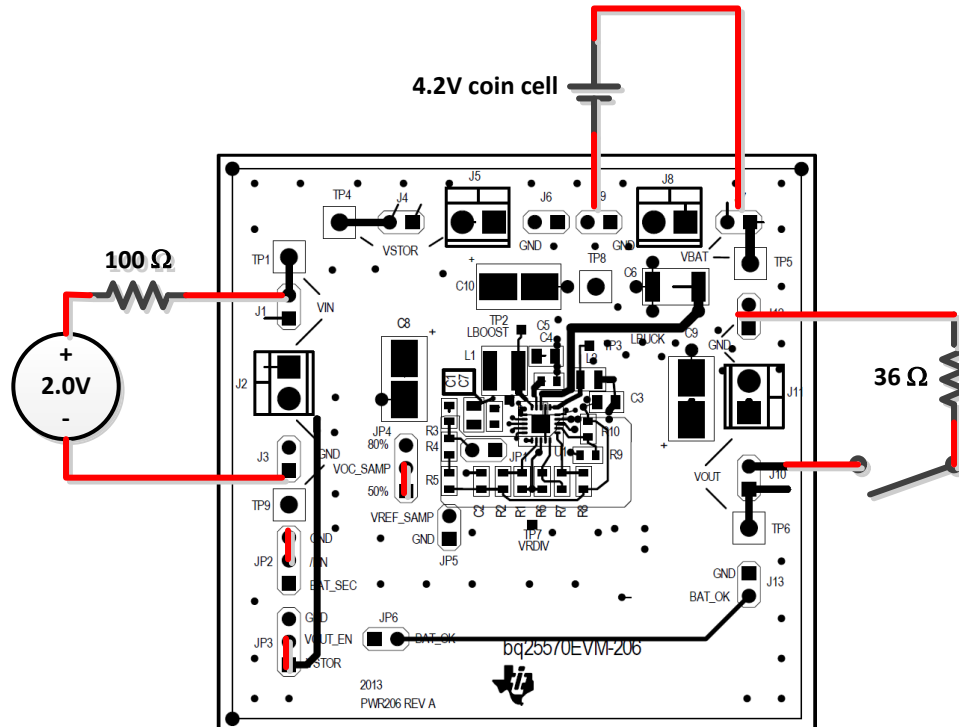


Figure 7. Test Setup for Performing Load Transient on Buck Output

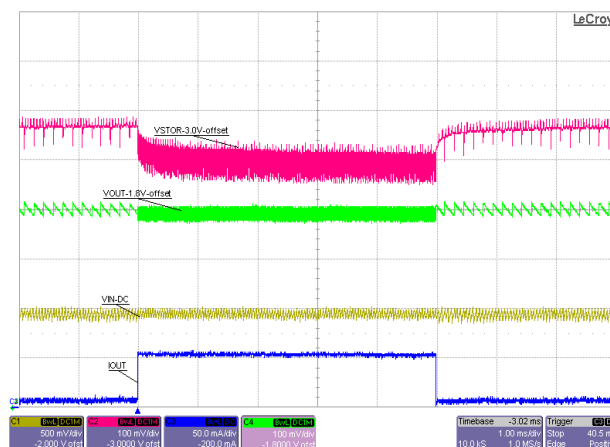


Figure 8. 50-mA Load Transient on V_{OUT}

3.2.4 Charger Operation During Load Transient

The test setup is shown in [Figure 7](#). The specific equipment used for the test results in [Figure 9](#) is listed below:

1. VIN_DC, VBAT and VOUT are configured as explained in [Section 3.2.3](#).
2. The boost charger inductor current (IL) was measured by using an oscilloscope current probe across a current loop that was inserted in series with inductor L1.
3. VSTOR's ripple voltage was measured using an oscilloscope voltage probe placed directly across the VSTOR capacitor (C5). The scope probe's standard ground lead was replaced with very short lead.
4. VIN and the LBOOST pin (switching node of the boost charger) were measured by oscilloscope voltage probes connected to TP1 and TP2.

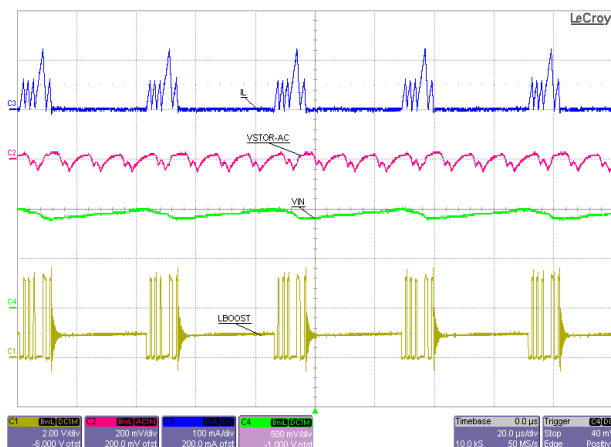


Figure 9. Charger Operational Waveforms During 50-mA Load Transient

3.2.5 Buck Converter Operation During Load Transient

The test setup is shown in [Figure 7](#). The specific equipment used for the test results in [Figure 10](#) is listed below:

1. VIN_DC, VBAT and VOUT are configured as explained in [Section 3.2.3](#).
2. The buck converter inductor current (IL) was measured by using an oscilloscope current probe across a current loop that was inserted in series with inductor L2.
3. VSTOR's ripple voltage was measured using an oscilloscope voltage probe placed directly across the VSTOR capacitor (C5). VOUT's ripple voltage was measured using an oscilloscope voltage probe placed directly across the VOUT capacitor (C3). Both scope probes' standard ground leads were replaced with very short lead.
4. The LBUCK pin's ripple voltage (switching node of the buck converter) was measured by a oscilloscope voltage probe connected to TP3.

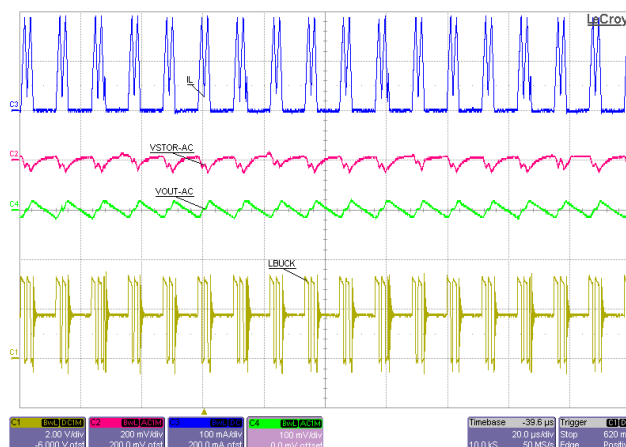


Figure 10. Buck Operational Waveforms During 50-mA Load Transient

3.2.6 Charging a Super Capacitor from Buck Converter Output

The test setup is shown in Figure 11. The specific equipment used for the test results in Figure 12 is listed below:

1. VIN_DC was connected to a Keithley 2420 configured as a 1.0-mA current source with 1.2-V voltage compliance.
2. VOUT was connected to a 120 mF super capacitor. There were no other loads on VSTOR, VBAT or VOUT.
3. VIN_DC, VSTOR and VOUT were measured with oscilloscope voltage probes connected at TP1, TP4 and TP6.

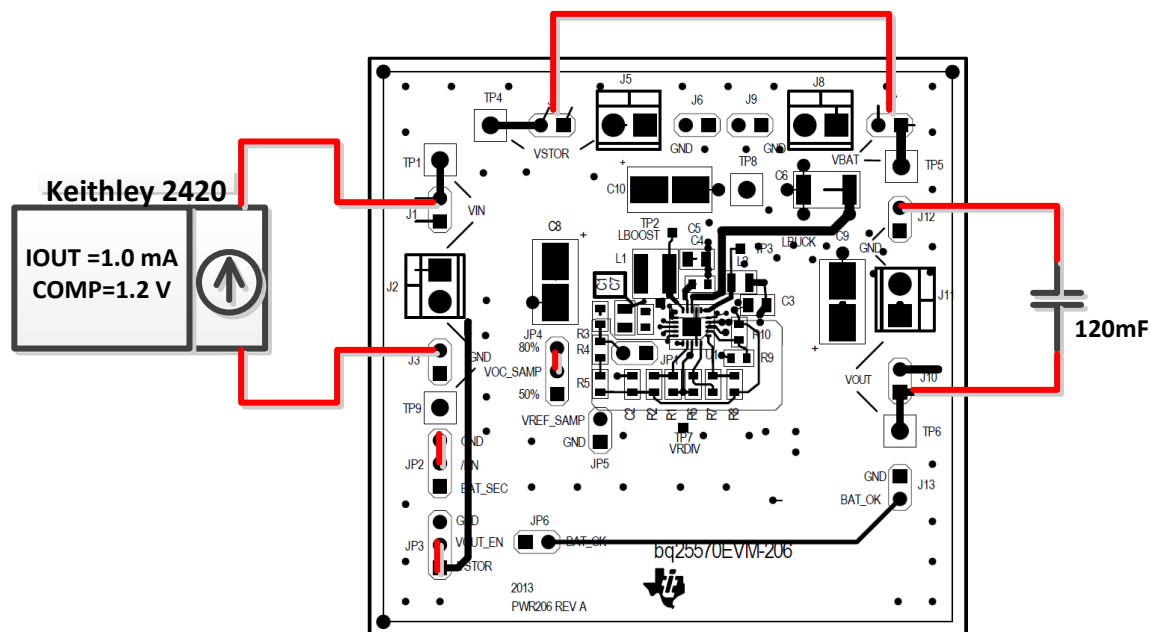


Figure 11. Test Setup for Charging a Super Capacitor from Buck Output

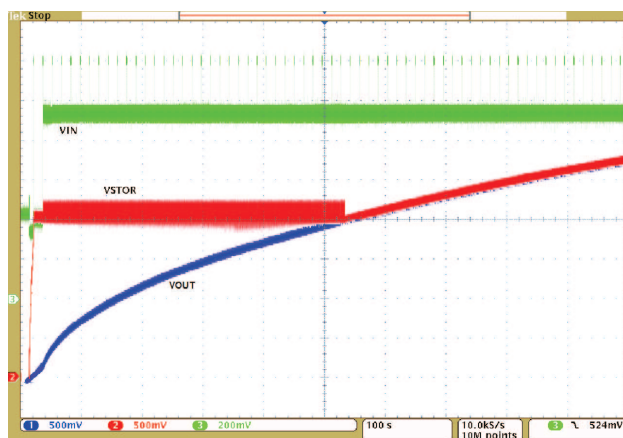


Figure 12. Charging a Super Cap from V_{OUT}

The benefit of charging of the super capacitor on VOUT instead of VBAT is faster charge time due to the charger spending less time in less efficient cold start mode.

3.3 Tips for other Tests and Measurements

The quiescent current during main boost operation, which is basically the current from the battery to the IC, is measured at the VSTOR pin. If a source-meter is not available to make the measurement, connect a 100-k Ω resistor to VSTOR and connect a 3-V supply from the other end of this resistor to the ground of the EVM. A 10-M Ω meter can be used to measure the voltage drop across the resistor and calculate the current. No other connections should be made to the EVM and the measurement should be taken after steady state conditions are reached (may take a few minutes). The reading should be much less than 100 nA.

4 Bill of Materials and Board Layout

4.1 Bill of Materials

Table 2. Bill of Materials

COUNT	RefDes	Value	Description	Size	Part Number	MFR
1	C1	4.7uF	Capacitor, Ceramic Chip, 6.3V, X7R, 10%	805	C0805C475K9RACTU	Kemet
1	C2**	0.01u**	Capacitor, Ceramic, 50V, X7R, 10%	0603	GRM188R71H103KA01D	Murata
1	C3	22uF	Capacitor, Ceramic Chip, 6.3V, X5R, 10%	805	JMK212BJ226MG-T	Taiyo Yuden
2	C4 C7	0.1uF	Capacitor, Ceramic Chip, 6.3V, X5R, 10%	603	06036D104KAT2A	AVX
1	C5	4.7uF	Capacitor, Ceramic Chip, 10V, X7R, 10%	805	LMK212B7475KG-T	Taiyo Yuden
1	C6	100uF	Capacitor, Ceramic Chip, 6.3V, X5R, 20%	1812	GRM43SR60J107ME20L	Murata
0	C8-10	DNP	Capacitor, Electrolytic, Snap Mt., v/v	7343 (D)	n/a	n/a
9	J1 J3-4 J6-7 J9-10 J12-13	PEC02SAAN	Header, Male 2-pin, 100mil spacing,	0.100 inch x 2	PEC02SAAN	Sullins
4	J2 J5 J8 J11	ED555/2DS	Terminal Block, 2-pin, 6-A, 3.5mm	0.27 x 0.25 inch	ED555/2DS	OST
3	JP1 JP5 JP6	PEC02SAAN	Header, Male 2-pin, 100mil spacing,	0.100 inch x 2	PEC02SAAN	Sullins
3	JP2-4	PEC03SAAN	Header, Male 3-pin, 100mil spacing,	0.100 inch x 3	PEC03SAAN	Sullins
1	L1	22uH	Inductor, SMT, 0.65A, 360milliohm	0.153 x 0.153 inch	LPS4018-223M	Coilcraft
1	L2	10 uH	Inductor, SMT, 1.4A, 216milliohm	2x2.5 mm	1239AS-H-100N	Toko
1	R1	7.5M	Resistor, Chip, 1/16W, 1%	603	CRCW06037M50FKEA	Vishay Dale
1	R10	8.66M	Resistor, Chip, 1/16W, 1%	603	CRCW06038M66FKEA	Vishay Dale
1	R2	5.76M	Resistor, Chip, 1/16W, 1%	603	CRCW06035M76FKEA	Vishay Dale
2	R3 R5	4.99M	Resistor, Chip, 1/16W, 1%	603	CRCW06034M99FKEA	Vishay Dale
1	R4	10M	Resistor, Chip, 1/16W, 1%	603	CRCW060310M0FKEA	Vishay Dale
1	R6	887k	Resistor, Chip, 1/16W, 1%	603	CRCW0603887KFKEA	Vishay Dale
1	R7	6.98M	Resistor, Chip, 1/16W, 1%	603	CRCW06036M98FKEA	Vishay Dale
1	R8	5.36M	Resistor, Chip, 1/16W, 1%	603	CRCW06035M36FKEA	Vishay Dale
1	R9	4.22M	Resistor, Chip, 1/16W, 1%	603	CRCW06034M22FKEA	Vishay Dale
4	TP1 TP4-6	5002	Test Point, White, Thru Hole Color Keyed	0.100 x 0.100 inch	5002	Keystone
0	TP2-3 TP7	DNP	Test Point, 0.020 Hole	0.100 x 0.100 inch	STD	STD
2	TP8-9	5001	Test Point, Black, Thru Hole Color Keyed	0.100 x 0.100 inch	5001	Keystone
1	U1	BQ25570RGR	IC, Ultra Low Power Harvester Charger + Buck IC	VQFN	BQ25570RGR	TI
4			Shunt, 100-mil, Black	0.1	929950-00	3M
1	--		PCB, 2.5212 in x 2.6039 in		PWR206	Any

4.2 EVM Board Layout

Figure 13 through Figure 15 are the board layouts for this EVM.

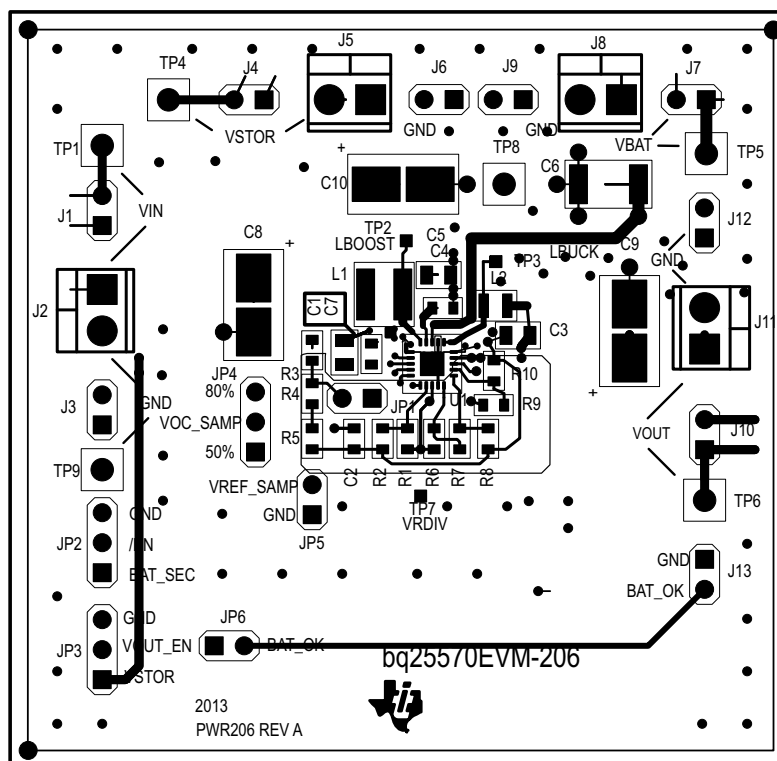


Figure 13. EVM PCB Top Assembly

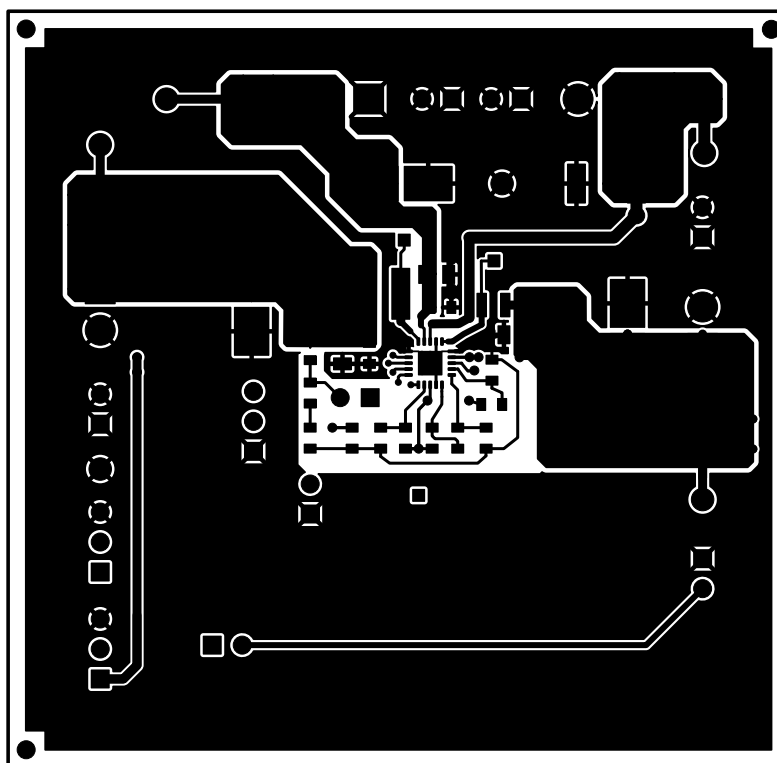


Figure 14. EVM PCB Top Layer

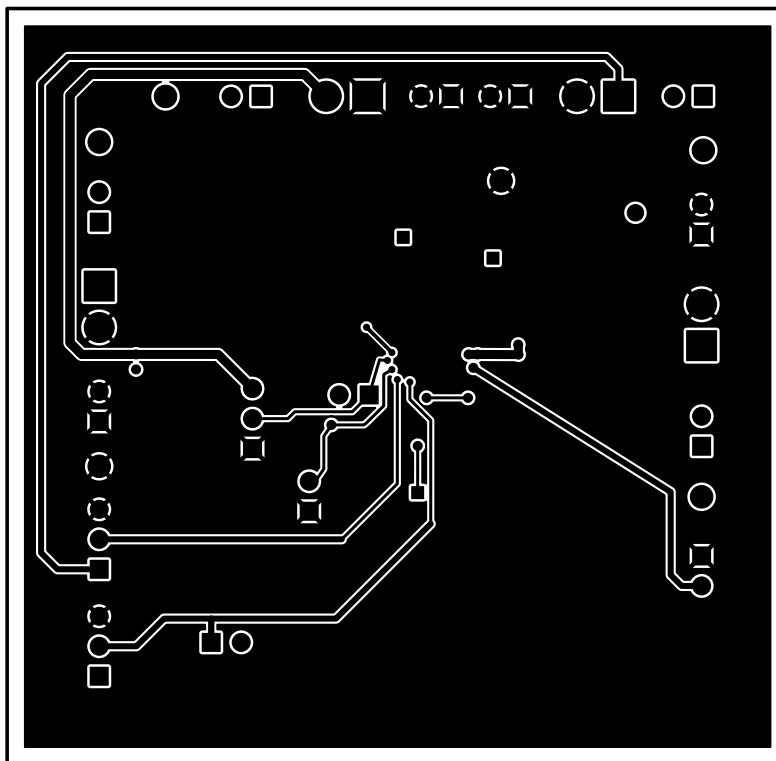


Figure 15. EVM PCB Bottom Layer

5 PCB Layout Guideline

As for all switching power supplies, the PCB layout is an important step in the design, especially at high peak currents and high switching frequencies. If the layout is not carefully done, the boost converter/charger and buck converter could show stability problems as well as EMI problems. Therefore, use wide and short traces for the main current path and for the power ground paths. The input and output capacitors as well as the inductors should be placed as close as possible to the IC. For the boost converter / charger, first priority are the output capacitors, including the 0.1uF bypass capacitor (CBYP), followed by C_{STOR}, which should be placed as close as possible between V_{STOR}, pin 19, and VSS, pin 1. Next, the input capacitor, C_{IN}, should be placed as close as possible between V_{IN_DC}, pin 2, and VSS, pin 1. Last in priority is the boost converter inductor, L1, which should be placed close to L_{BOOST}, pin 20, and V_{IN_DC}, pin 2. For the buck converter, the output capacitor C_{OUT} should be placed as close as possible between V_{OUT}, pin 14, and VSS, pin 15. The buck converter inductor (L2) should be placed as close as possible between the switching node L_{BUCK}, pin 16, and V_{OUT}, pin 14. It is best to use vias and bottom traces for connecting the inductors to their respective pins instead of the capacitors.

To minimize noise pickup by the high impedance voltage setting nodes (V_{BAT_OV}, OK_PROG, OK_HYST, V_{OUT_SET}), the external resistors should be placed so that the traces connecting the midpoints of each divider to their respective pins are as short as possible. When laying out the non-power ground return paths (for example from resistors and C_{REF}), it is recommended to use short traces as well, separated from the power ground traces and connected to VSS pin 15. This avoids ground shift problems, which can occur due to superimposition of power ground current and control ground current. The PowerPad should not be used as a power ground return path.

The remaining pins are either NC pins, that should be connected to the PowerPad as shown below, or digital signals with minimal layout restrictions.

In order to maximize efficiency at light load, the use of voltage level setting resistors > 1MΩ is recommended. However, during board assembly, contaminants such as solder flux and even some board cleaning agents can leave residue that may form parasitic resistors across the physical resistors and/or from one end of a resistor to ground, especially in humid, fast airflow environments. This can result in the voltage regulation and threshold levels changing significantly from those expected per the installed resistor values. Therefore, it is highly recommended that no ground planes be poured near the voltage setting resistors. In addition, the boards must be carefully cleaned, possibly rotated at least once during cleaning, and then rinsed with de-ionized water until the ionic contamination of that water is well above 50 MOhm. If this is not feasible, then it is recommended that the sum of the voltage setting resistors be reduced to at least 5X below the measured ionic contamination.

EVALUATION BOARD/KIT/MODULE (EVM) ADDITIONAL TERMS

Texas Instruments (TI) provides the enclosed Evaluation Board/Kit/Module (EVM) under the following conditions:

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please visit www.ti.com/esh or contact TI.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used. TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

REGULATORY COMPLIANCE INFORMATION

As noted in the EVM User's Guide and/or EVM itself, this EVM and/or accompanying hardware may or may not be subject to the Federal Communications Commission (FCC) and Industry Canada (IC) rules.

For EVMs **not** subject to the above rules, this evaluation board/kit/module is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by TI to be a finished end product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC or ICES-003 rules, which are designed to provide reasonable protection against radio frequency interference. Operation of the equipment may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

General Statement for EVMs including a radio

User Power/Frequency Use Obligations: This radio is intended for development/professional use only in legally allocated frequency and power limits. Any use of radio frequencies and/or power availability of this EVM and its development application(s) must comply with local laws governing radio spectrum allocation and power limits for this evaluation module. It is the user's sole responsibility to only operate this radio in legally acceptable frequency space and within legally mandated power limitations. Any exceptions to this are strictly prohibited and unauthorized by Texas Instruments unless user has obtained appropriate experimental/development licenses from local regulatory authorities, which is responsibility of user including its acceptable authorization.

For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant

Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For EVMs annotated as IC – INDUSTRY CANADA Compliant

This Class A or B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Concerning EVMs including radio transmitters

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concerning EVMs including detachable antennas

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet appareil numérique de la classe A ou B est conforme à la norme NMB-003 du Canada.

Les changements ou les modifications pas expressément approuvés par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner l'équipement.

Concernant les EVMs avec appareils radio

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

【Important Notice for Users of EVMs for RF Products in Japan】

This development kit is NOT certified as Confirming to Technical Regulations of Radio Law of Japan

If you use this product in Japan, you are required by Radio Law of Japan to follow the instructions below with respect to this product:

1. Use this product in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use this product only after you obtained the license of Test Radio Station as provided in Radio Law of Japan with respect to this product, or
3. Use of this product only after you obtained the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to this product. Also, please do not transfer this product, unless you give the same notice above to the transferee. Please note that if you could not follow the instructions above, you will be subject to penalties of Radio Law of Japan.

Texas Instruments Japan Limited
(address) 24-1, Nishi-Shinjuku 6 chome, Shinjuku-ku, Tokyo, Japan

<http://www.tij.co.jp>

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

<http://www.tij.co.jp>

EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMERS

For Feasibility Evaluation Only, in Laboratory/Development Environments. Unless otherwise indicated, this EVM is not a finished electrical equipment and not intended for consumer use. It is intended solely for use for preliminary feasibility evaluation in laboratory/development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems and subsystems. It should not be used as all or part of a finished end product.

Your Sole Responsibility and Risk. You acknowledge, represent and agree that:

1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
3. Since the EVM is not a completed product, it may not meet all applicable regulatory and safety compliance standards (such as UL, CSA, VDE, CE, RoHS and WEEE) which may normally be associated with similar items. You assume full responsibility to determine and/or assure compliance with any such standards and related certifications as may be applicable. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.
4. You will take care of proper disposal and recycling of the EVM's electronic components and packing materials.

Certain Instructions. It is important to operate this EVM within TI's recommended specifications and environmental considerations per the user guidelines. Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output are maintained at a normal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch. As with all electronic evaluation tools, only qualified personnel knowledgeable in electronic measurement and diagnostics normally found in development environments should use these EVMs.

Agreement to Defend, Indemnify and Hold Harmless. You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of the agreement. This obligation shall apply whether Claims arise under law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

Safety-Critical or Life-Critical Applications. If you intend to evaluate the components for possible use in safety critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2013, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com